


REPLACE A STRUT

REMOVE A CLASSIC STRUT:

1. Remove the Velcro at the end of the Batten
2. Make a knot with a small rope on the valve, this rope will help you to put the strut in its place.
3. Remove the strut

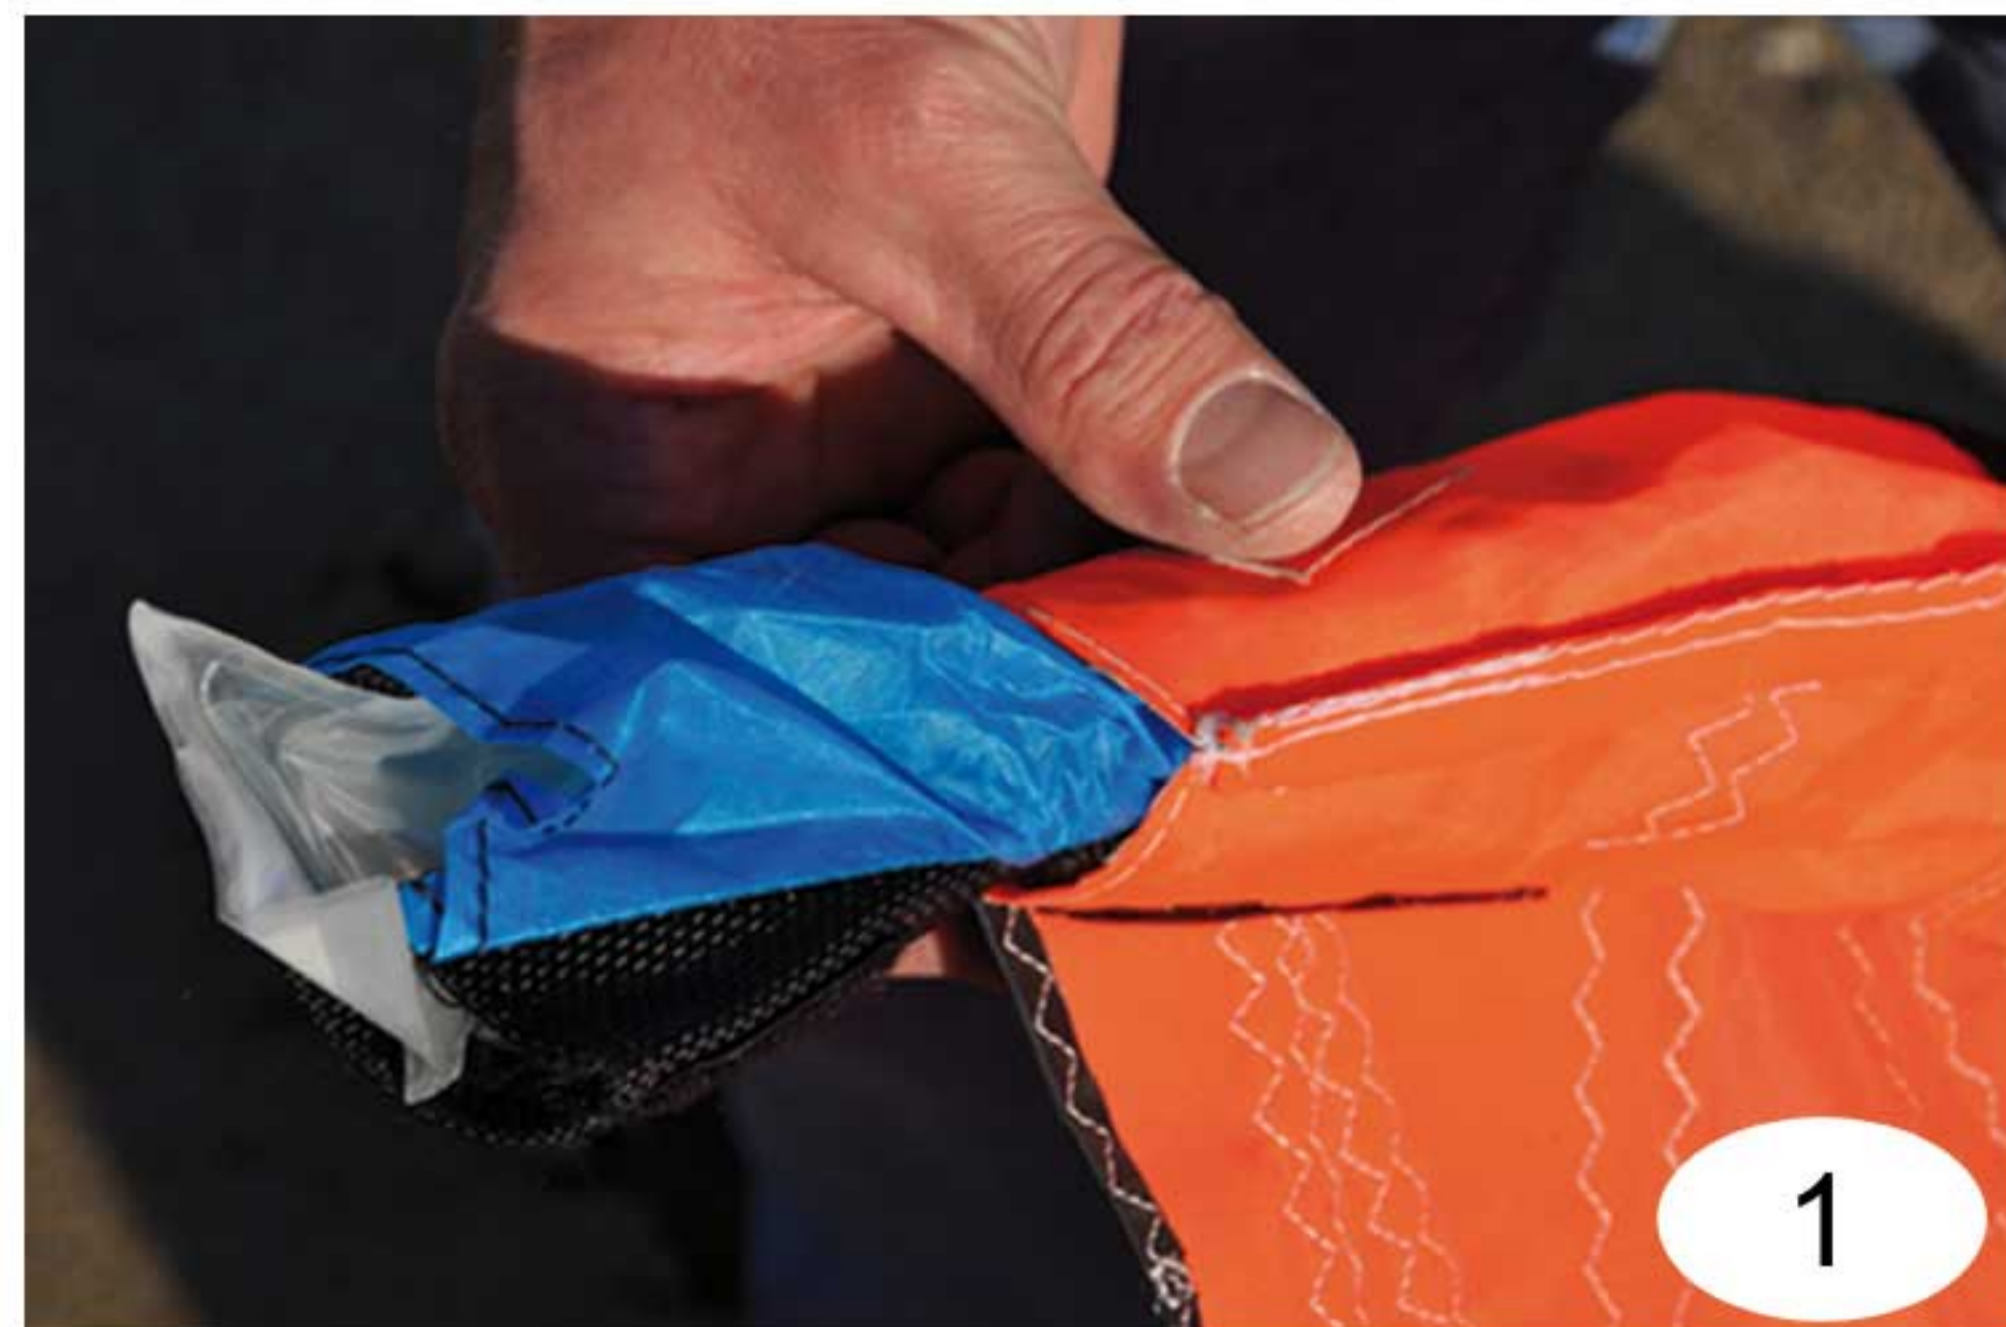

REMOVE A STRUT WITH NAISH OCTOPUS:

1. Disconnect the One Pump.
2. Remove the Velcro from the end and tie up with a small rope.
3. Remove the strut.



PUT THE STRUT BACK:

1. Sprinkle the strut with some talc.
2. If the strut goes in its place by the Velcro side, fold the end side of the valve like a sock. This will allow the strut to take its place along the LEADING EDGE while you inflate the bladder.
3. Do not forget to put the Velcro back in its place.



4. If your strut opens on the leading edge side, put it back in the other way. Connect the One Pump system (refer to the user's manual)
5. Inflate the strut, massaging the strut to make it go back to its own place. **Warning:** if the strut makes some folds, means that it's twisted. Deflate it; massage it to make it go back in its place.
6. Double check that the end, on the valve side, is well inflated. If not, remove it and put it back.

